

HOLD LED



BPC-49940-3/AUTO/BOX



SPECIFICATIONS

- TYPE:----- DIGITAL
- DISPLAY:----- 4-DIGIT, 7 SEGMENT RED SUPER BRIGHT LED
- CHARACTER HEIGHT:----- 4" (101.6 mm) 9 THOUSAND 9 HUNDRED AND 99
- VISIBILITY:----- 250 Ft. (76.2 METERS)
- POWER REQUIREMENTS:-- 100-240V 50~60Hz (**SWITCHIG POWER SUPPLY**)
- FRAME:----- 18.25" x 30.25" x 1.38" (**Black Anodized Aluminum**)
- WEIGHT:----- 11.5 lbs.
- OPERATING TEMP.:----- -17° TO 182° F
- HUMIDITY:----- 0% TO 95% NON-CONDENSING
- OPERATING MODE ----- ACTUAL COUNT UP BY 1. GOAL HAS AUTOMATIC ADVANCE BY TAKT TIMER WITH RUN/HOLD AND RESET CONTROL.

15 ft. CABLE



ACTUAL COMPLETED

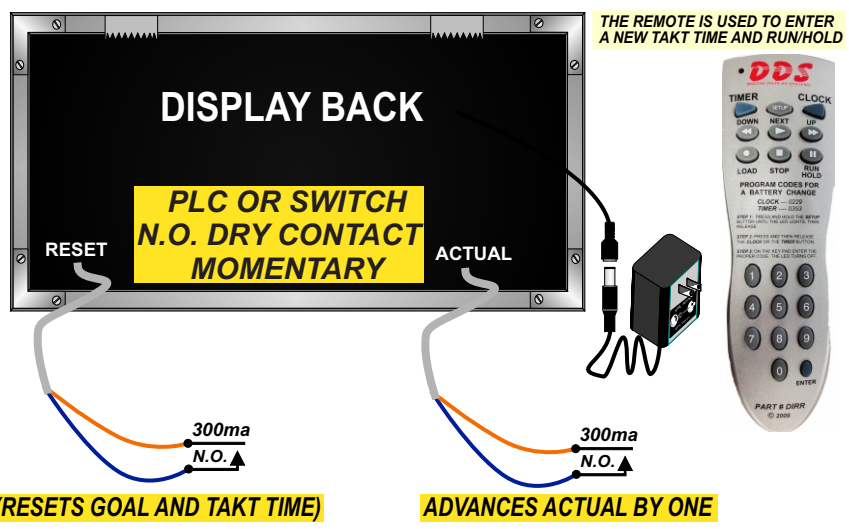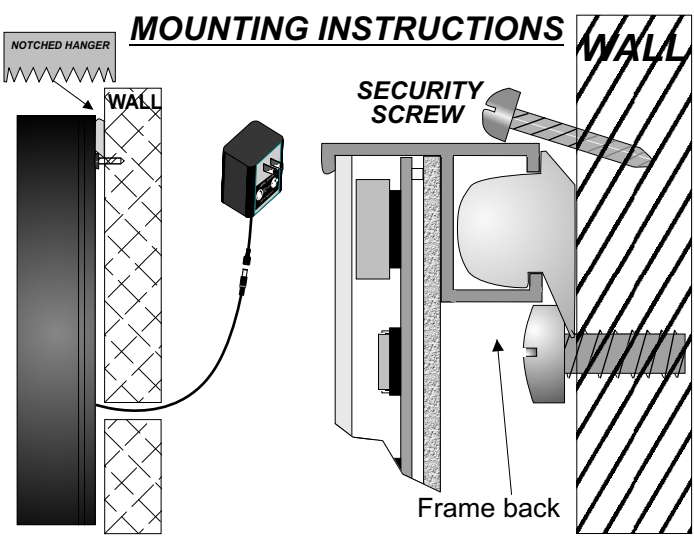

THE REMOTE IS USED TO ENTER A NEW TAKT TIME AND RUN/HOLD



SETTING INSTRUCTIONS

TO ENTER A COUNT DOWN TIME PRESS THE (**ENTER**) KEY, ALL DIGITS FLASH, ENTER THE **MIN** AND **SEC** THEN PRESS THE (**ENTER**) KEY TO ACCEPT THE COUNT DOWN. TO PUT ON HOLD PRESS THE (**RUN/HOLD**) KEY, TO RUN PRESS THE (**RUN/HOLD**) KEY AGAIN. PRESS THE (**REC**) KEY TWICE TO RESTORE THE LAST ENTERED COUNT DOWN TIME.

NOTE: ENTER KEY FUNCTIONS ON HOLD ONLY

THE REMOTE IS USED ONLY TO ENTER A NEW TAKT TIME AND RUN OR HOLD.



IF THE BATTERIES ARE REPLACED REPROGRAM THE REMOTE CONTROL

STEP 1: PRESS AND HOLD THE (**SETUP**) BUTTON UNTIL THE LED STAYS ON, THEN RELEASE.

STEP 2: PRESS AND RELEASE THE (**DVD/VCR**) BUTTON.

STEP 3: ON THE KEY PAD PRESS **0229**. AFTER YOU PRESS THE LAST DIGIT, THE LED TURNS OFF.