

# BET IRR INSTRUCTIONS

AT POWER UP, THE DISPLAY WILL SHOW REAL TIME AND IS RUNNING.

## TO SWITCH BETWEEN REAL TIME / COUNT UP / COUNT DOWN DISPLAYS

PRESS **NEXT** BUTTON. COUNT UP WILL HAVE LED DOT ON TOP RIGHT. COUNT DOWN WILL HAVE LED DOT ON BOTTOM.

\*\* Some timers will also have a brightness and 12/24hour display.



## TO OPERATE TIMER

MAKE SURE CORRECT DISPLAY (COUNT UP/DOWN) IS SHOWN.

PRESS **RUN/HOLD** KEY TO START TIMER.

PRESS **RUN/HOLD** KEY TO PAUSE TIMER. LED DOT WILL FLASH WHEN TIMER IS PAUSED.

PRESS **LOAD** TO RESET TIMER TO ZERO OR LAST PRESET TIME.

## TO SET REAL TIME OR PRESET COUNTDOWN START TIME

MAKE SURE CORRECT DISPLAY (REAL TIME OR COUNT DOWN) IS SHOWN. IF ON COUNTDOWN DISPLAY, PAUSE TIMER.

PRESS **ENTER** KEY. ALL DIGITS WILL START TO FLASH.

PRESS DESIRED TIME ON KEYPAD IN **HOURS:MINUTES:SECONDS** FORMAT. (Ex: 995959 for 99 hours, 59 minutes, 59 seconds)

PRESS **ENTER** KEY TO CONFIRM. PRESS **STOP** KEY TO CANCEL.

**IF THE TIMER IS NOT RESPONDING OR IF THE REMOTE'S BATTERY IS REPLACED, PLEASE REPROGRAM THE REMOTE.:**

1. Press and hold the **(SETUP)** button until LED light stays on, then release.
2. Press the **(TIMER)** button.
3. On keypad, enter the **TIMER code** (For example: **0822**). The LED will turn off after entering the last digit.

NOTE: FOR OLDER MODELS BEFORE 2018 PLEASE USE CODES:

CLOCK — 0712  
TIMER — 1252

