



QUICK GUIDE

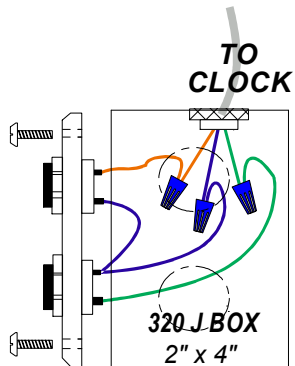

TO SWITCH PLATE MATCH LIKE COLORS WITH LIKE COLORS

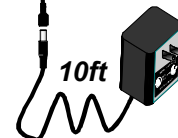


WHEN THE “CODE BLUE” SWITCH IS PRESSED, THE DISPLAY CHANGES FROM REAL TIME TO ELAPSED TIME AND STARTS RUNNING. TO STOP, PRESS THE “STOP” BUTTON. THE DISPLAY WILL SWITCH BACK TO REAL TIME IN 30 SEC.

THE LAST “CODE BLUE” TIME IS HELD IN MEMORY, TO DISPLAY, PRESS THE “STOP” SWITCH, PRESSING THE “STOP” SWITCH AGAIN RETURNS IT TO REAL TIME.

COLONS WILL FLASH IN CODE BLUE MODE.

TIME AND BRIGHTNESS

PRESS (CLOCK), ENTER “00”. ZONE WILL START FLASHING. PRESS (NEXT) TO CYCLE THROUGH REGISTERS

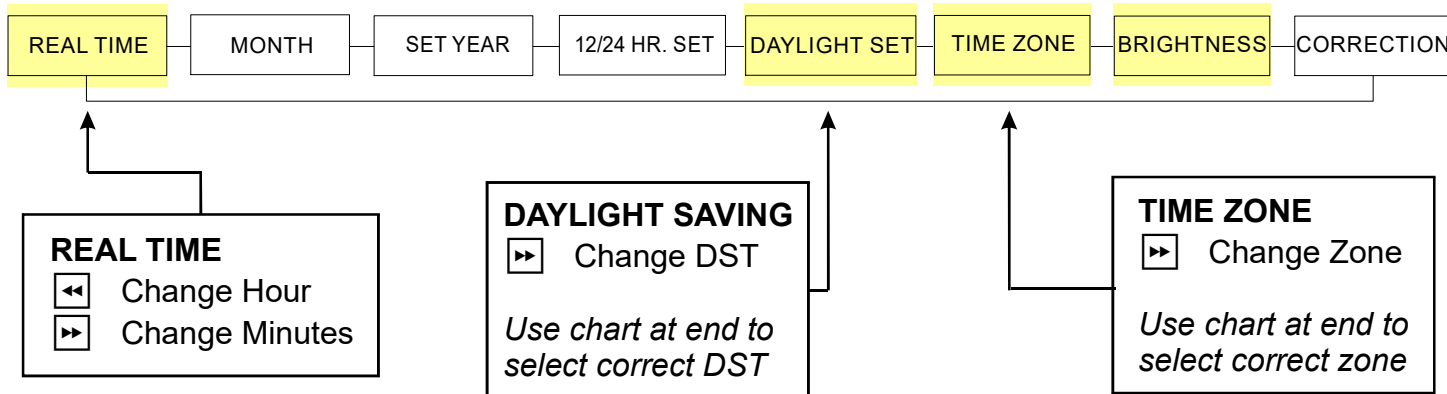

IF THE BATTERIES OF THE REMOTE ARE REPLACED, YOU MUST REPROGRAM THE REMOTE.

1. Press and hold the (SETUP) button until LED light stays on, then release.
2. Press the (CLOCK) button.
3. On keypad, enter the clock code (For example: 0712). The LED will turn off after entering the last digit.
4. Access the time zone setting by pressing 00.

