

DAC-9 Calendar Setting Instructions With Pushbuttons

THERE ARE TEN REGISTERS. THEY ARE Set Time, Set Date, Set Year, Set Correction Set Zone, Set Daylight, Set Brightness, Set Time Form, Set Date Form AND THE RUN MODE. THE (DISPLAY) BUTTON WILL DISPLAY THESE REGISTERS.

TO SET A REGISTER WILL USE THE (SET 1) AND THE (SET 2) BUTTON.

NOTE: SETTING IS NOT REQUIRED. ALL REGISTERS HAVE BEEN PRESET, AND THE CLOCK IS RUNNING AT THE CORRECT TIME.

REGISTER 1: (DISPLAY) TIME SETTING. (SET 1) IS HRS AND (SET 2) IS MIN

REGISTER 2: (DISPLAY) DATE SETTING (SET 1) IS MONTH AND (SET 2) IS DAY

REGISTER 3: (DISPLAY) YEAR SETTING (SET 1) IS DOWN AND (SET 2) IS UP




REGISTER 4: (DISPLAY) CORRECTION (SET 1) IS DOWN AND (SET 2) IS UP

REGISTER 5: (DISPLAY) ZONE SETTING (SET 1) IS DOWN AND (SET 2) IS UP

REGISTER 6: (DISPLAY) DAYLIGHT (SET 1) IS DOWN AND (SET 2) IS UP

REGISTER 7: (DISPLAY) BRIGHTNESS (SET 1) IS DOWN AND (SET 2) IS UP

   REGISTER 10: DISPLAY POSITION

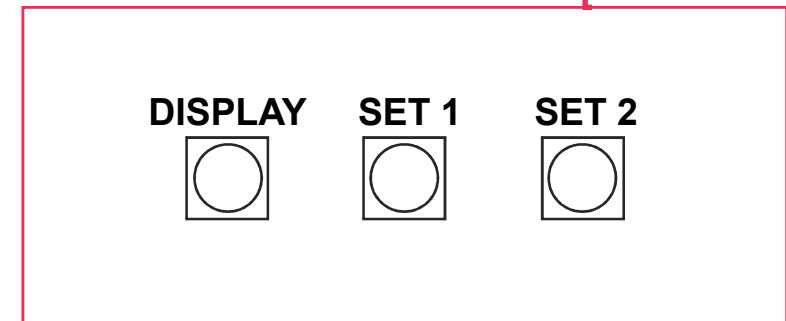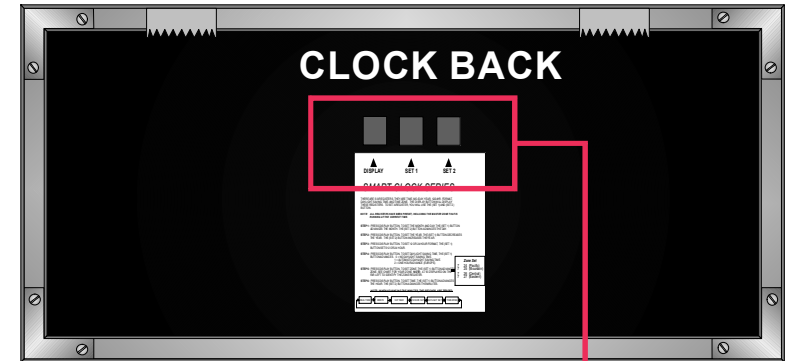


REGISTER 8: TIME FORM (SET 1) OR (SET 2)

6 DIGIT 24hr



 4 DIGIT 12hr




6 DIGIT 12hr



YEAR ONLY DISPLAYED



 4 DIGIT 24hr



REGISTER 9: DATE FORM (SET 1) OR (SET 2)

