

# DAC-9 Calendar Setting Instructions With the IRR Remote

THERE ARE TEN REGISTERS. THEY ARE **Set Time, Set Date, Set Year, Set Correction Set Zone, Set Daylight, Set Brightness, Set Time Form, Set Date Form AND THE RUN MODE.** THE (NEXT) BUTTON WILL DISPLAY THESE REGISTERS.

TO SET A REGISTER WILL USE THE (DOWN) AND THE (UP) BUTTON.

**NOTE:** SETTING IS NOT REQUIRED. ALL REGISTERS HAVE BEEN PRESET, AND THE CLOCK IS RUNNING AT THE CORRECT TIME.

REGISTER 1: (NEXT) TIME SETTING. (DOWN) IS HRS AND (UP) IS MIN

REGISTER 2: (NEXT) DATE SETTING (DOWN) IS MONTH AND (UP) IS DAY

REGISTER 3: (NEXT) YEAR SETTING (DOWN) IS DOWN AND (UP) IS UP

REGISTER 4: (NEXT) CORRECTION (DOWN) IS DOWN AND (UP) IS UP

REGISTER 5: (NEXT) ZONE SETTING (DOWN) IS DOWN AND (UP) IS UP

REGISTER 6: (NEXT) DAYLIGHT (DOWN) IS DOWN AND (UP) IS UP

REGISTER 7: (NEXT) BRIGHTNESS (DOWN) IS DOWN AND (UP) IS UP

## REGISTER 8: TIME FORM (DOWN) OR (UP)

6 DIGIT 24hr

Set Form 11:13:01

4 DIGIT 12hr

Set Form 05 11:12a

6 DIGIT 12hr

Set Form 11:13:09a

YEAR ONLY DISPLAYED

Set Form Year 2005

4 DIGIT 24hr

Set Form 05 11:13

## REGISTER 9: DATE FORM (DOWN) OR (UP)

Set Form TUE JUN 21


Set Form TUE 21 JUN

Set Form 21 JUN TUE

Set Form JUN 21 TUE

## REGISTER 10: DISPLAY POSITION

TUE JUN 21 05 11:11a

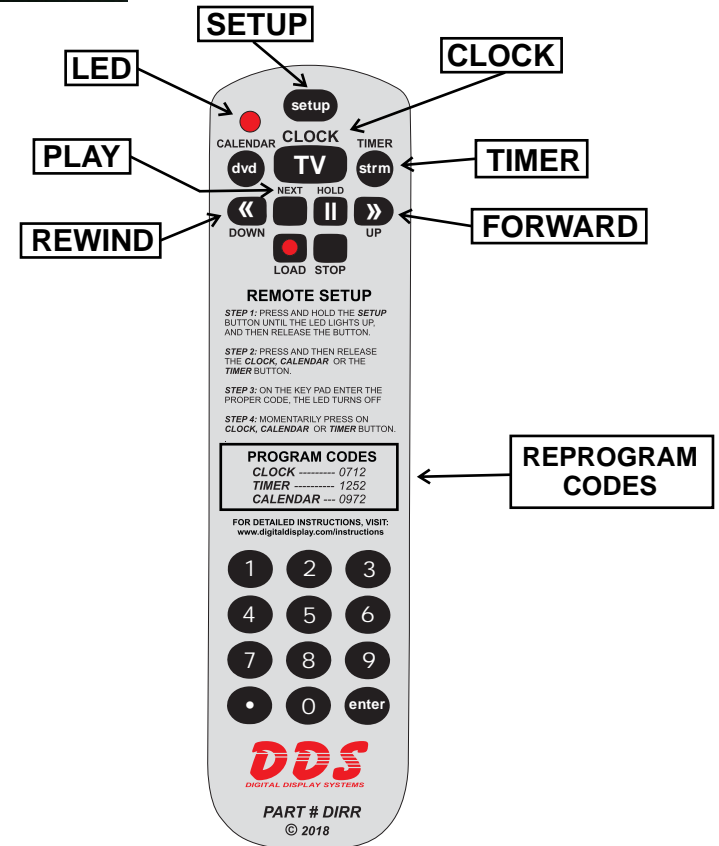

## IF THE BATTERIES ARE REPLACED REPROGRAM THE REMOTE CONTROL

**STEP 1:** PRESS AND HOLD THE (SETUP) BUTTON UNTIL THE LED STAYS ON, THEN RELEASE.

**STEP 2:** PRESS AND RELEASE THE (TIMER/CAL) BUTTON.

**STEP 3:** ON THE KEY PAD PRESS **0822**. AFTER YOU PRESS THE LAST DIGIT, THE LED TURNS OFF.